

EPSON

H20RC

ROM Cartridge Mounting Procedure

EPSON OVERSEAS MARKETING LOCATIONS

EPSON AMERICA, INC.
3415 Kashiwa Street
Torrance, Calif. 90505
U.S.A.
Phone: (213) 539-9140

EPSON DEUTSCHLAND GmbH
Am Seestern 24
4000 Düsseldorf 11
F.R. Germany
Phone: (0211) 596-1001

EPSON UK LTD.
Dorland House
1st Floor,
388 High Road
Wembley, Middlesex,
U.K.
Phone: (01) 900-0466/7/8/9

Printed in Japan

EPSON

H8294006-1

The H20RC ROM Cartridge functions as an external memory of the HX-20 portable computer to store programs and data. This option incorporates a ROM program and a control circuit.

Features

1. Compact design mountable on the HX-20.
2. Separate power source unnecessary as the ROM cartridge operates from the built-in battery of the HX-20.
3. One-touch mounting and dismounting.
4. High operation reliability because the program is incorporated in the ROM.
5. Capable of storing high capacity programs or data. (8K- to 32K-byte ROM capacity).
6. File configuration employs headers so that read time may be short.

Mounting method

Mount the H20RC ROM cartridge on the HX-20 portable computer using the following procedure.

- (1) Turn off the power switch of the HX-20.
- (2) To remove the cartridge case, push the cartridge lever of the main body in the direction indicated by the arrow and slide the cartridge away from the main body of the HX-20. Then, place your fingers in the clearance between the cartridge case and the main body and slide it in the same direction as before, to remove the cartridge case.

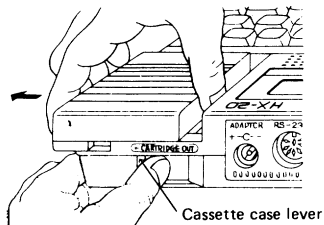


Fig. 1

- (3) Remove the H20RC ROM cartridge from its packing.
- (4) Match the ROM cartridge's slot and the main body's slot, face the ROM cartridge connector inwards, and insert it completely, sliding the ROM cartridge by hand.

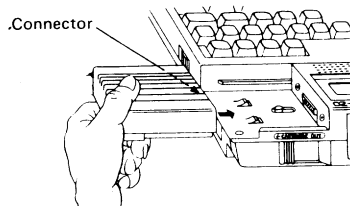


Fig. 2

Upon completion of mounting, check that there is no gap between the case of the ROM cartridge and the main body.

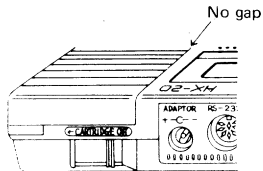


Fig. 3

- (5) Upon completion of mounting, verify normal operation by executing the commands for the H20RC ROM cartridge described in the operation manual.